


Livarno Upgrade Kit Instructions


Step 1.

Remove the doors and any internal fixtures and shelves so that you are left with an empty case.
Put the shelves and shelf brackets to one side for later.

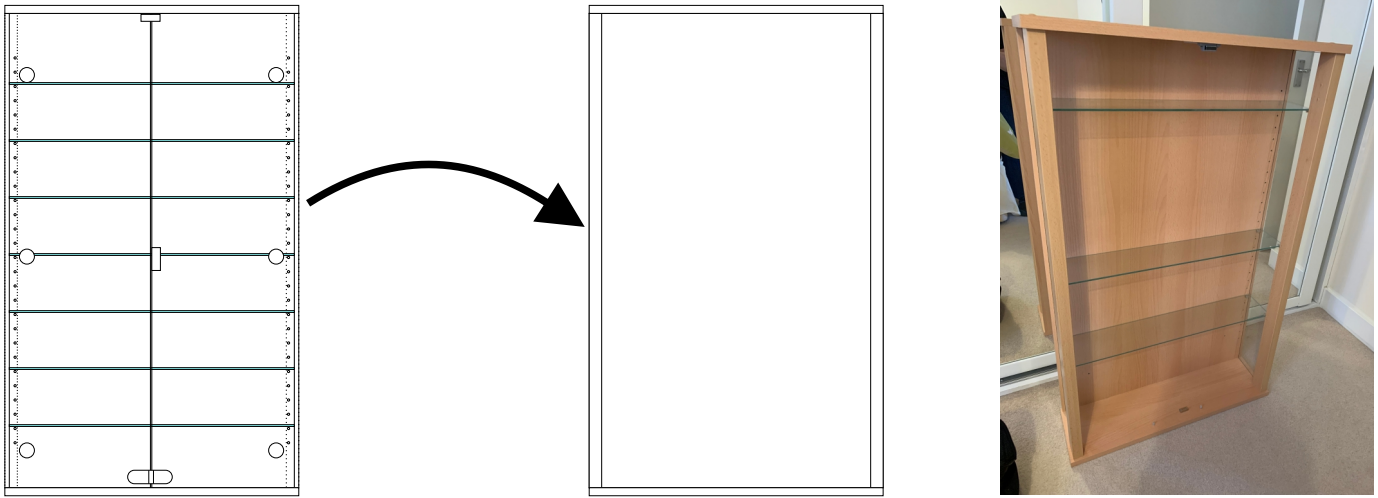


Step 2.

Take the backing from the black foamex strips and stick to the front edges as below.
After application, hammer in 3 or 4 pins to each side

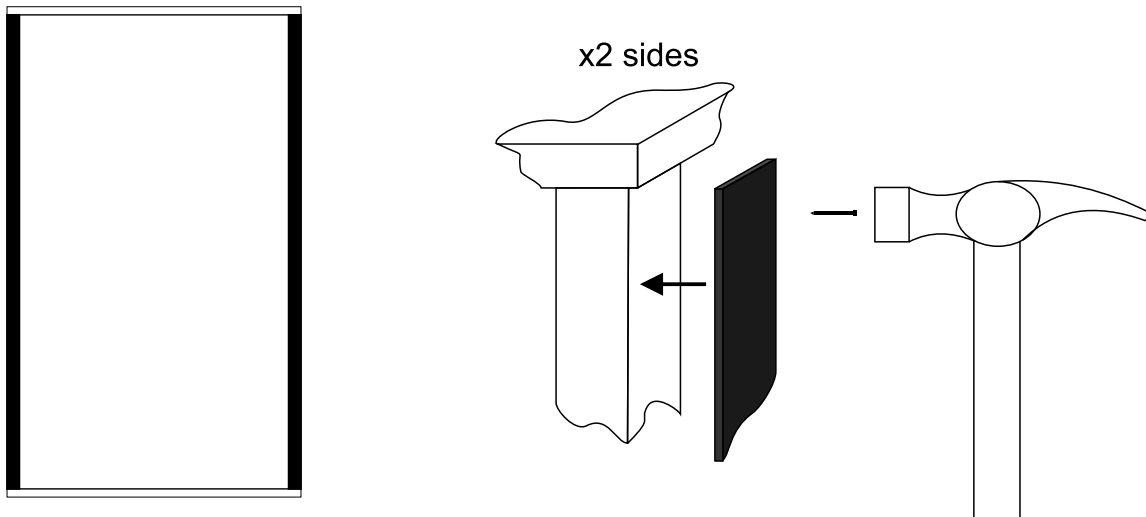

Step 3.


Now make sure the edges are clean and dry and apply the magnetic tape to the front edges.
Apply plenty of pressure and pin approx every 200mm



Step 4.

Remove the backing tape from panel 8 and stick to the back panel at the bottom.

Now add 2 shelf brackets to the holes that are in the notched area and 2 to the opposite holes at the same height. Then add one glass shelf above the bottom panel.

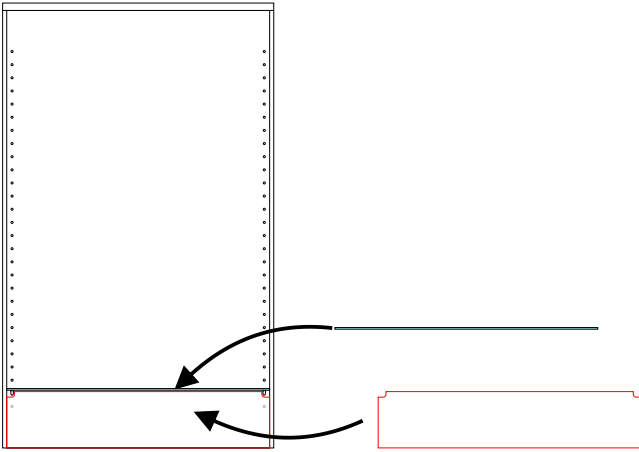


Step 5.

Remove the backing tape from panel 7 and stick to the back panel on top of the last shelf fitted.

Now add 2 shelf brackets to the holes that are in the notched area and 2 to the opposite holes at the same height.

Then add one glass shelf above the last panel fitted

REPEAT the process for all the remaining panels then remove the front protective film from all the back panels.

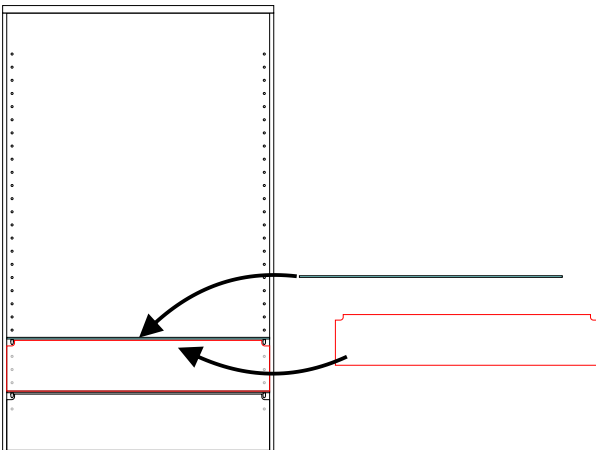


Step 6.

Now that all the backing panels are in place, the face panel bracket and logo can be fitted.

Carefully remove the protective film from the front of the face panel paying particular attention not to scratch it.

Then position the logo over the corresponding holes on the front. Now place the bracket on the rear lined up with the same holes and put the bolts provided through the holes and then put the nut on the back and tighten.

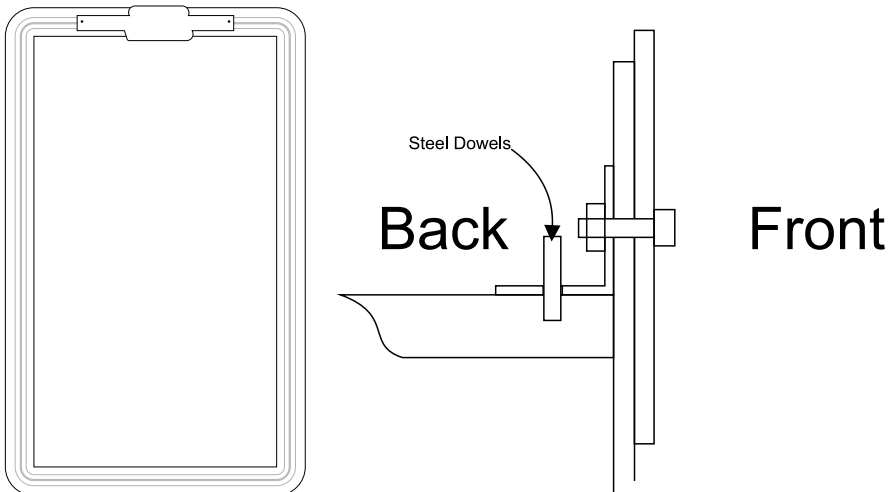

We recommend drilling two 4mm holes in the top of the case and using the two steel dowels provided to secure the face panel and prevent it being knocked off